SPECIFICATION SHEETFall protection



Concrete Removable Anchor

CAK115

The **concrete removable anchor** is designed for temporary fall protection applications in concrete structures. Made from high-quality stainless steel, it offers excellent corrosion resistance and durability, even in harsh environments.

Its design allows for quick and easy insertion into pre-drilled concrete holes. This anchor provides a secure and reliable attachment point for personal fall arrest systems, ensuring worker safety without compromising efficiency. It is ideal for use in construction, maintenance, and other elevated work scenarios

Material	
Wire	Aluminum
Tubing	Clear PVC
Trigger	Aluminum

Capacity:

59-141kg (130-310lbs) (weight range including equipment)


Technical Data

 Minimum Breaking Strength: 5,000lbs, 22kN

Certification

Meets and Exceeds

⇒ ANSI Z359.18-2017 Type A

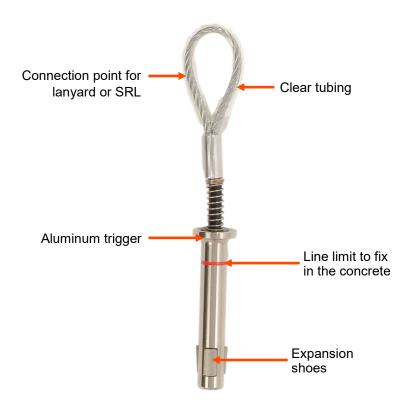

Installation and Use

Drill hole: Using a suitable drill bit, create a 20 mm diameter hole in the concrete surface at the desired anchoring point.

Insert the anchor: While keeping the spring-loaded trigger compressed, insert the anchor fully into the pre-drilled hole.



Release trigger: Once the anchor is in place, release the trigger. This activates

trigger. This activates the expansion shoes, which secure the anchor firmly inside the concrete.



Attach the Connector: Connect your lanyard or fall protection system to the anchor loop. Ensure the connection is secure before use.



SPECIFICATION SHEETFall protection



Associate Products

Covers the ABC of fall protection: Anchor points, Body support (harnesses), Connecting devices (lanyards) - ensuring complete safety at height.









Maintenance and Inspection

Maintenance

- Clean after each use to maintain safety and durability.
- Remove any dust, corrosive material or contaminants.
- If the fall protection system cannot be cleaned with clean water, use mild soap and water, then rinse and wipe dry.
- NEVER clean the fall protection system with corrosive materials.

Inspection

- Before EVERY use, inspect the fall protection system for defects.
- IMMEDIATELY remove the fall protection system from service if any defects or damage are found, or if it is exposed to fall arrest forces.
- At least every 12 months, a competent person other than the user shall inspect the harness.

Important

