

# SPECIFICATION SHEET

## Hand Protection



**KOSTO**  
BUILT STRONG • BÂTI SOLIDE

### Full - Grain Cut and Impacts Resistant High density Polyethylene-Lined Driver Style Glove

#### MKGV27

##### Description

The driver's style glove offers greater dexterity compared to installer's style gloves. Its short wrist allows free movement of the hands.

##### Certification

Tested [ANSI/ISEA 105-2016](#)  
Cut resistance [Level A5 –2800g.](#)  
Puncture resistance [Level 3](#)

Tested [ANSI/ISEA 138-2019](#)  
Impact resistance [Level L 3—average transmitted force ≤ 4kN](#)

##### Material

Full grain cow leather grade A/B  
High density polyethylene lining  
TPR Protection hi-vis orange

##### Size

XS to 2XL

Cow leather grade A/B

Base of the fingers reinforced with leather piece.

Wing thumb

Resistant seams

TPR protection on the fingers and back of the hand

Leather reinforcement at the thumb

Elastic at the wrist



High density polyethylene (HPPE) liner attached to fingers and thumb to hold when worn or when removing the glove.



# FICHE TECHNIQUE

## Hand Protection



**KOSTO**  
BUILT STRONG • BÂTI SOLIDE

### Related Products

#### Gloves MKGV25

- Cut resistance Level A5



#### Gloves MKVA05

- Cut resistance Level A6
- Impacts resistance Level 1




### Care and washing instructions

A good way to keep leather gloves longer is to clean them regularly.

- Dry cleaning - best option to retain the natural oils of the leather
- Clean with a cloth and a mild soap that contains natural fats (e.g. Marseille soap)
- Clean with a soft, damp cloth, removing any dirt
- Air dry only
- Do not clean with hard soap as it removes the natural oils from the leather and makes it stiffer.



### Sizing Chart

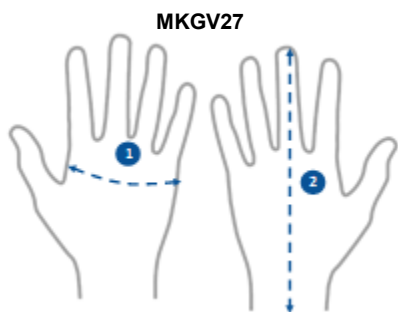

Size Kosto *		XS	S	M	L	XI	2XL
1	Width (hand) cm	11	11,5	12	12,5	13	13,5
	po / in	4,25	4,5	4,7	4,9	5,1	5,3
2	Length (glove) cm	21,5	22,5	23,5	25	26	27
	po / in	8,4	1,7	9,25	9,8	10,2	10,6

\* The measurements are those of the product.

\* A fitting is always recommended.