

# SPECIFICATION SHEET

## Feet Protection



**KOSTO**  
BUILT STRONG • BÂTI SOLIDE

### AirTech Pro 8" Metal-Free Safety Boots

**PBK002**

#### Description

Kosto's Airtech 8 inch metal-free work boot has a Vibram TC4 non-slip rubber sole to prevent falls on slippery floors. The 200g Thinsulate lining provides lightweight warmth for all-day comfort.

#### Certification

Meets specifications for performance requirements for protective boots

- ⇒ **CSA Z195-14**
- ⇒ **ASTM F2413-18 I/C - EH**

#### Material

- Made of water-resistant Crazy horse leather
- Vibram® TC4 rubber non-skid sole 200g Thinsulate lining
- Nylon with Sympatex® waterproof membrane
- Shank
- H<sub>2</sub>O seal® sealed seams
- Antibacterial treatment Agion®

#### Size

5 to 8 ; 8.5 to 10.5; 11 to 14

### AirTech Pro

Padded collar

Dielectric

H<sub>2</sub>O seal® sealed seams

Made of water-resistant Crazy horse leather and Nylon.

Antibacterial treatment Agion®

Stylish and lightweight metal-free boot

Vibram® TC4 rubber non-skid sole


Removable memory foam insole for better support of your feet to get you through the day

Wide style 3E

Shank

Composite toe and puncture-resistant plate

Sympatex® waterproof membrane



**Thinsulate** 200g  
INSULATION

# SPECIFICATION SHEET

## Feet Protection



**KOSTO**  
BUILT STRONG • BĂȚI SOLIDE

### Associated Products

**PBK001**



**PBK202**



**PBK101**




### Care Guide

A good way to keep leather boots longer is to clean them regularly.

- To start, take off the laces and clean with hot water and a shoe brush removing dirt
- Remove pebbles stuck in the sole
- Wipe the boot with a dry cloth and air dry only
- DO NOT clean with harsh soap as this removes natural oils from the leather and makes it more rigid

### Size Chart

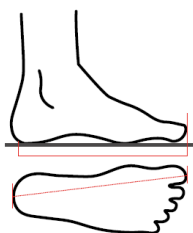

Kosto Sizes * US/CAN			5	6	7	8 ½	9	9 ½	10	10 ½	11	12	13	14
1	Length (foot)	cm	22,9	23,5	24,1	25,7	26,0	26,3	26,8	27,3	27,8	28,6	29,4	30,2
		in	9,0	9,3	9,5	10,1	10,3	10,4	10,6	10,8	10,9	11,3	11,6	11,9

\* A fitting is always recommended before use.

#### General tips

- Try the boots on both feet, as both feet can be different sizes.
- Boots should fit snugly at the heel and ankle when laced up.
- Wear your work stockings during the fitting