

# SPECIFICATION SHEET

## Foot Protection



**KOSTO**  
BUILT STRONG • BÂTI SOLIDE

### AirMet 8" Safety Boots Metal Free Black

**PBK060**

#### Description

Kosto's 8-inch Airmet work boot has a soft PORON XRD internal metatarsal protector that hardens on impact to protect the top of the foot. Its rubber sole withstands heat up to 300°C for one minute and its flame-retardant stitching makes it the perfect ally for hazardous work environments.

#### Certification

Meets specifications for performance requirements for protective boots

⇒ **CSA Z195-14**

#### Poron XRD®

During normal wear, Poron XRD® internal met guard is soft, flexible and comfortable. Upon impact, it instantly firms to form a protective shell that shield the instep from impact

#### Material

- Made of full grain leather
- Poron XRD® internal Metguard firms upon impact
- Thinsulate 200g
- Hydroguard® waterproof membrane
- Cambrelle® lining
- PU/rubber, heat-resistant outsole up to 300°C for one minute

#### Size

7 to 10.5; 11 to 14

#### AirMet

Dielectric

Lightweight, metal-free boot



Padded collar

Flame-retardant stitching

Made of premium quality full grain leather and water resistant

Poron XRD® internal Metguard firms upon impact

Wear-resistant polyurethane bumper toe

PU/rubber, heat-resistant outsole up to 300°C for one minute

Removable memory foam insole for better support of your feet to get you through the day



Composite toe and puncture-resistant plate

Cambrelle lining keeps the foot cool and dries quickly, odor and mildew resistant



Width: 3E

Shank



**Thinsulate** 200g  
INSULATION

**PROTECTION • RELIABILITY • VALUE**

WWW.SPI.COM

UPD: 03-23

# SPECIFICATION SHEET

## Foot Protection



**KOSTO**  
BUILT STRONG • BĂTI SOLIDE

### Associated Products

#### PBS009

With external metatarsal



#### PBK089

With external metatarsal




### Care Guide

A good way to keep leather boots longer is to clean them regularly.

- To start, take off the laces and clean with hot water and a shoe brush removing dirt
- Remove pebbles stuck in the sole
- Wipe the boot with a dry cloth and air dry only
- DO NOT clean with harsh soap as this removes natural oils from the leather and makes it more rigid

### Size Chart

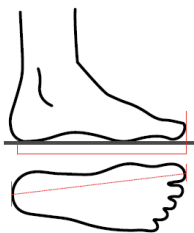

Kosto Sizes * US/CAN		5	6	7	8 ½	9	9 ½	10	10 ½	11	12	13	14	
1	Length (foot)	cm	22,9	23,5	24,1	25,7	26,0	26,3	26,8	27,3	27,8	28,6	29,4	30,2
		in	9,0	9,3	9,5	10,1	10,3	10,4	10,6	10,8	10,9	11,3	11,6	11,9

\* A fitting is always recommended before use.

#### General tips

- Try the boots on both feet, as both feet can be different sizes.
- Boots should fit snugly at the heel and ankle when laced up.
- Wear your work stockings during the fitting