

SPECIFICATION SHEET

Feet Protection



KOSTO
BUILT STRONG • BÂTI SOLIDE

Cedrik 8" Metal Free Safety Boots

PBK087

Description

Comfortable metal-free boot made from the toughest TEK leather. The lightweight PU / rubber sole provides excellent grip. The waterproof Hydroguard membrane and the 200g Thinsulate lining help keep feet dry and warm for the day. This boot is perfect for workers looking for the perfect boot for jobs of all kinds.

Certification

Meets specifications for performance requirements for protective boots

- ⇒ [CSA Z195-14](#)
- ⇒ [ASTM F2413-18 M/I/C - EH/PR](#)

Material

- Premium full grain leather and very resistant TEK leather
- Lightweight industrial PU / natural rubber sole, non-slip
- Thinsulate lining
- Hydroguard® waterproof membrane

Size

4 to 7 ; 8 to 10.5; 11 to 14



Thinsulate 200g
INSULATION

SPECIFICATION SHEET

Feet Protection



KOSTO
BUILT STRONG • BÂTI SOLIDE

Additional views - Associated Products

Additional views

PBK089

With external metatarsal




Care Guide

A good way to keep leather boots longer is to clean them regularly.

- To start, take off the laces and clean with hot water and a shoe brush removing dirt
- Remove pebbles stuck in the sole
- Wipe the boot with a dry cloth and air dry only
- DO NOT clean with harsh soap as this removes natural oils from the leather and makes it more rigid

Size Chart

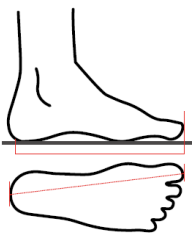

Kosto Sizes * US/CAN		5	6	7	8 ½	9	9 ½	10	10 ½	11	12	13	14	
1	Length (foot)	cm	22,9	23,5	24,1	25,7	26,0	26,3	26,8	27,3	27,8	28,6	29,4	30,2
		in	9,0	9,3	9,5	10,1	10,3	10,4	10,6	10,8	10,9	11,3	11,6	11,9

* A fitting is always recommended before use.

General tips

- Try the boots on both feet, as both feet can be different sizes.
- Boots should fit snugly at the heel and ankle when laced up.
- Wear your work stockings during the fitting