

# SPECIFICATION SHEET

## Foot Protection



# KOSTO

BUILT STRONG • BÂTI SOLIDE

## Tork 8" Metal-Free Safety Boots

### PBK101

#### Description

Kosto's Tork 8 inch metal-free work boot is made of water-resistant nubuck leather and a Thinsulate lining for added warmth. Its PU and rubber sole offer oil resistance and ground adherence to prevent bad falls.

#### Certification

Meets specifications for performance requirements for protective boots

⇒ **CSA Z195-14**

#### Material

- Made of full-grain leather and nylon
- Dual density PU and TPU outsole for better adherence and resistance to oils
- Cambrelle lining
- 200 g Thinsulate insulation

#### Size

7 to 10.5; 11 to 14

### Tork



# SPECIFICATION SHEET

## Foot Protection



**KOSTO**  
BUILT STRONG • BĂTI SOLIDE

### Associated Products

**PBK202**



**PBK002**



**PBK087**




### Care Guide

A good way to keep leather boots longer is to clean them regularly.

- To start, take off the laces and clean with hot water and a shoe brush removing dirt
- Remove pebbles stuck in the sole
- Wipe the boot with a dry cloth and air dry only
- DO NOT clean with harsh soap as this removes natural oils from the leather and makes it more rigid

### Size Chart

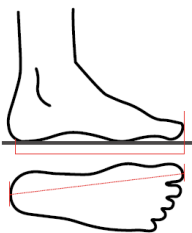

Kosto Sizes *		7	8 ½	9	9 ½	10	10 ½	11	12	13	14	
1	Length (foot)	cm	24,1	25,7	26,0	26,3	26,8	27,3	27,8	28,6	29,4	30,2
		in	9,5	10,1	10,3	10,4	10,6	10,8	10,9	11,3	11,6	11,9

\* A fitting is always recommended before use.

#### General tips

- Try the boots on both feet, as both feet can be different sizes.
- Boots should fit snugly at the heel and ankle when laced up.
- Wear your work stockings during the fitting