

SPECIFICATION SHEET

Foot Protection



KOSTO

BUILT STRONG • BÂTI SOLIDE

Tarmak 8" Metal-Free Safety Boots

PBK202

Description

Kosto's Tarmak 8 inch metal-free work boot is made of full-grain leather and nylon. It has a 200 g Thinsulate insulation to keep your feet warm. Its PU and rubber sole offer oil resistance and ground adhesion to keep you on your feet all day long!

Certification

Meets specifications for performance requirements for protective boots

⇒ [CSA Z195-14](#)

Material

- Made of full-grain leather and nylon
- Dual density PU and TPU outsole for better adherence and resistance to oils
- Cambrelle lining
- 200 g Thinsulate insulation

Size

4 to 7 ; 7.5 to 10.5; 11 to 14

Tarmak

Zipper closure on the inner side providing quick access



Angled padding for added comfort

Protective composite toe cap and wear-resistant TPU protector



Made of water resistant nubuck leather

Lightweight and metal-free boots

Lightweight PU / TPU sole



Removable memory foam insole for better support of your feet to get you through the day



Non-metallic puncture-resistant plate

Cambrelle lining keeps the foot cool and dries quickly, odor and mildew resistant



Width: 3E

Shank



PROTECTION • RELIABILITY • VALUE

WWW.SPI.COM

UPD: 02-23

SPECIFICATION SHEET

Foot Protection



KOSTO
BUILT STRONG • BĂTI SOLIDE

Associated Products

PBK101

PBK002

PBK087




Care Guide

A good way to keep leather boots longer is to clean them regularly.

- To start, take off the laces and clean with hot water and a shoe brush removing dirt
- Remove pebbles stuck in the sole
- Wipe the boot with a dry cloth and air dry only
- DO NOT clean with harsh soap as this removes natural oils from the leather and makes it more rigid

Size Chart

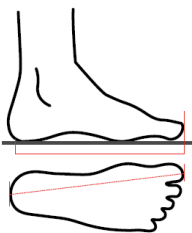

Kosto Sizes *		US/CAN		5	6	7	8 ½	9	9 ½	10	10 ½	11	12	13	14
1	Length (foot)	cm		22,9	23,5	24,1	25,7	26,0	26,3	26,8	27,3	27,8	28,6	29,4	30,2
		in		9,0	9,3	9,5	10,1	10,3	10,4	10,6	10,8	10,9	11,3	11,6	11,9

* A fitting is always recommended before use.

General tips

- Try the boots on both feet, as both feet can be different sizes.
- Boots should fit snugly at the heel and ankle when laced up.
- Wear your work stockings during the fitting