

# SPECIFICATION SHEET

## Foot Protection



**KOSTO**  
BUILT STRONG • BÂTI SOLIDE

### 15" Black Waterproof PVC Safety Boots

#### PKC001

#### Description

Kosto's 15" waterproof work boots are made of 100% waterproof PVC to keep your feet dry in all weather conditions. Its non-slip PVC and nitrile sole keeps your feet dry all day long. Ideal for a wide range of work environments, these versatile safety boots are resistant to manure, acids, alkalis, oils and greases. The steel toe cap and anti-puncture plate will keep you out of harm's way.

#### Certification

Meets specifications for performance requirements for protective boots

- ⇒ [CSA Z195-14](#)
- ⇒ [ASTM F2413-18 I/C - PR - SD 100](#)

#### Material

- Made of 100% waterproof PVC
- Non-slip PVC and nitrile sole
- Cotton lining

#### Size

4 to 13



With its breathable cotton lining, this safety boot will keep your feet comfortable in all weather conditions.

100% waterproof PVC  
Flexible, easy to clean and very resistant

Steel toe cap to protect against impact, compression and puncture

Removable insole molded to ensure superior comfort so you can stay on your feet all day.

Puncture-resistant steel plate

Non-slip PVC/nitrile sole

The outsole contains an anti-static compound to dissipate electrostatic charges in a controlled manner



# SPECIFICATION SHEET

## Foot Protection



**KOSTO**  
BUILT STRONG • BÂTI SOLIDE

### Additional views - Associated Products

#### Additional views



#### PAK017 Comfort liners




### Care Guide

A good way to keep rain boots longer is to clean them regularly.

- To start, clean with a sponge or soft cloth dipped in warm water with a little dish soap and wrung out well.
- Remove stones and dirt stuck in the sole using a brush
- Wipe the boot with a dry cloth and air dry only

### Size Chart

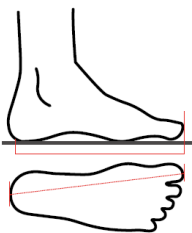

Kosto Sizes *		4	5	6	7	8	9	10	11	12	13	
1	Length (foot)	cm	24.5	25.2	26.2	27.2	28	28.5	29	30	30.5	31
		in	9.7	9.9	10.3	10.7	11	11.2	11.4	11.8	12	12.2

\* A fitting is always recommended before use.

#### General tips

- Try the boots on both feet, as both feet can be different sizes.
- Boots should fit snugly at the heel and ankle when laced up.
- Wear your work stockings during the fitting
- If you want to add a PAK017 comfort liner, allow space in the boot